


No. 1072
ADJ. PLENUM TOP

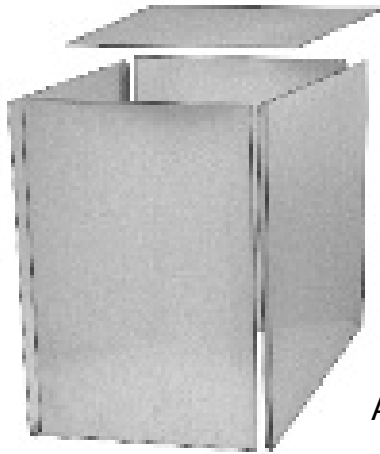

No. 1076
COMPLETE
ADJ. PLENUM


ADJUSTABLE PLENUMS

AVAILABLE TO ORDER
(Actual plenum height is
2" less than listed size)

TO INSTALL...

- (1) Cut raw edges of side panels to desired width and height sizes.
- (2) Trim top to desired width and depth dimensions.
- (3) Assemble 3 sides, slide top into side panel pockets, then position fourth side.
- (4) Secure assembly with sheet metal screws.

No. 1073
ADJ. PLENUM SIDE

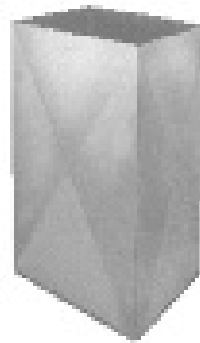

No. 1074
'A' STYLE PLENUM



No. 1075
'B' STYLE PLENUM

RETURN AIR PACKAGE

Complete package
consisting of:
1 - Starting Collar
2 - 30" Duct Sections
1 - R.A. Plenum with
1" Filter Rack
6 - 10" Drive Straps
Shipped K.D. in One Carton



No. 137
DRAIN PAN

RA PKG	DUCT SIZE	BOOT ONLY
1221	20 x 10 - 20 x 16	1221B
1222	25 x 10 - 25 x 16	1222B
1223	20 x 10 - 20 x 14	1223B
1224	25 x 10 - 25 x 14	1224B